

TROUBLE SHOOTING

CTV			
Sr. No	Symptoms		Checks
	Picture	Sound	
1	Snowy Picture	Noisy Sound	Aerial location, direction or connection.
2	Multiple images	Normal sound	Try a different channel. If OK probably it is station trouble. Try reorienting the aerial and check the connection.
3	Interference	Noisy Sound	This may be due to electrical appliances, cars/ motorcycle, and fluorescent lamps.
4	Normal Picture	No Sound	Volume (Check whether the mute function has been activated on the remote handset).
5	No Picture	No Sound	Check the AC connection. Check by pushing the power switch or stand by key on remote handsets.
6	No color	Normal sound	Adjust color controls. Check if station is broadcasting color picture.
7	Scrambled picture	Normal or weak sound	Re-tune Channel.
8	Color patch	Normal sound	This may be caused by magnetic interference from unshielded equipment or if the TV set is moved while it is ON. Turn the TV set OFF for 30 min using the main power switch.