

TROUBLE SHOOTING

Microwave Ovens		
Sr. No	Symptoms	Checks
1	If the oven fails to operate	1) Check to ensure that the oven is plugged in securely. If it is not then remove the plug from the outlet, wait 10 seconds and plug it in securely.
		2) Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the outlet with other appliance.
		3) Check to see that the control panel is programmed correctly and the timer is set.
		4) Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise the microwave energy will not flow into the oven.
2	Some other problem	1) Contact the service centre for repair.