

## TROUBLE SHOOTING

Multimedia Speakers		
Sr. No	Symptoms	Checks
1	No sound	1) Poor connection from the power plug and socket. 2) The power button is set off. 3) Check the amplifier fuse. 4) Volume knob is set to min. 5) The speaker cable is disconnected. 6) Check the RCA cable.
2	No sound from the front speakers	Poor connection from speaker cable. Reconnect the speaker correctly.
3	No sound from one of the front speakers	Poor connection or speaker cable is connected to one point Check RCA cable for loose connection
4	No sound from the centre speakers	Channel is not set correctly Sound volume is set to min. The speaker cable is connected to one point.
5	No sound from surround speaker	Channel is not set correctly reset correctly. Surround volume is set to min The speaker cable is connected to one point.
6	No surround effect	The channel is wrongly selected. The speaker cable is connected to on point.
7	Remote not operating	Check batteries polarities. Replace old batteries with new.