

## TROUBLE SHOOTING

### Semi Automatic Washing Machine

Sr. No	Symptoms	Checks
1	The machine does not start	Is the power cord inserted firmly or is the power cord disconnected? If not, then connect it properly.
2	Washing and Spinning operation is not working	Is the wash/spin timer switch turned to OFF position?
3	Spinning operation not starting even after setting the spin knob	Is the spin lid open? If yes, then close properly.
		Is there any laundry falling out from the SPIN tub? If yes, then make sure that it goes inside the spin tub and is levelled properly.